

**Manasquan Fire Department
Manasquan Fire District #1
Standard Operating Guideline**

400.01

Title: Diesel Fume Extraction System

**Date Issued: September 2010
Date Last Revised: NEW
Revision Number: NEW
Total Pages: 2**

Purpose: To establish the proper guidelines for operating the Diesel Fume Extraction Systems located in our Department's facilities.

Scope: All members of the department shall follow this guideline. Deviation from the guideline could cause injury to personnel and failure of the system to provide the level of air quality desired.

General: In an effort to improve the air quality of our facilities and to reduce the spread of diesel fumes into the living areas, onto protective clothing and most importantly into employee's breathing air, the Department has installed Diesel Fume Control Systems in our facilities. All personnel riding or driving apparatus that utilize bays fitted with these control systems shall follow these guidelines at all times.

400.01.01 Operating Guidelines

Upon approach to the apparatus bay, the vehicle shall come to a **stop** as close to the doorway as possible. Once the vehicle has stopped, another individual shall properly attach the magnetic nozzle to the tailpipe. The nozzle must be attached as the apparatus is placed into the stall. Attaching the nozzle and hose after the apparatus is in place is not acceptable and defeats the purpose of the system.

Safety should be practiced while the vehicle proceeds into the stall. Attaching of the nozzle while the apparatus is in motion is not recommended. The stopping of the vehicle to couple the nozzle is recommended to reduce the potential of injury to the person attaching the nozzle.

SAFETY NOTICE !

*Stop all vehicles before attaching the magnetic nozzle to the exhaust pipe!
Attaching the nozzle to a moving vehicle is dangerous. If the vehicle fails*

to stop upon entering the building, do not attempt to attach the nozzle.

Wait until the vehicle stops completely!

While leaving the facility, the apparatus should exit normally. The nozzle is designed to release from the vehicle without any obstruction.

Unless access to a particular compartment is needed, system hoses should be attached at all times while the vehicle is in quarters. The Station Officer is responsible for compliance with this directive.

The extraction system has several sensitive electronic components. At no time should anyone attempt to adjust any of the devices that are part of the system. This would include the hose, magnetic nozzle, and all electrical devices.

Questions concerning the system should be directed to the officer in charge.

400.01.02 Employee Training Notice

All employees are to be trained by their company officers in the proper use of the system.